

MARPORT | PRO



TRIDENT
SENSOR

2022

USER MANUAL



Contents

Legal	4	Applying Offsets to Measurements	28
History	4	Testing Measures	29
Copyright	4	SD Card Recording	31
Disclaimer	4	Saving a Configuration on Mosa2	33
		Exporting Sensor Configuration	36
		Importing a Sensor Configuration	36

Introduction and Presentation	6		
Introduction	7		
Applications	8		
Safety Guidelines	9		
Description	10		
System Compatibility	10		
Technical Specifications	10		
Main Parts	12		

		System Configuration and Display	38
		Adding the Sensors to the Receiver	39
		Adding the Sensors to the Receiver	39
		Configuring Sensor Settings	40
		Configuring Data Display on Scala2	42
		Replaying Data	46

Sensor Configuration	14	Installation	48
Connecting the Sensor to Mosa2	15	Installing the Sensor on the Trawl	49
Battery Information	18		
Configuring the Trawl Node	19		
Configuring the Uplink Frequency and Power	21		
Sounding Modes	22		
Configuring the Echo Sounder	24		
About the Automatic Range Mode	27		

		Maintenance and Troubleshooting	51
		Charging the Sensor with the Dock	52
		Cleaning the Sensor	53

Maintenance Checklist	54
Troubleshooting	55
Mosa2 does not open due to error message	55
Sensor does not connect correctly with Mosa2	
when using the Configuration Cable	56
The echogram has a lot of interference	57
Support Contact	58

Appendix	60
Frequency Plan	60

Index	a
--------------	----------

Legal

History

V1	04/19/22	First release
V2	08/04/22	<ul style="list-style-type: none">• Now documents Scala2 version 02.10.x and Mosa2 version 02.11.x.• Added frequency bandwidth schemas in Frequency Plan (on page 60).

Copyright

© 2022 Marport. All Rights reserved.

No part of this document may be reproduced, stored in a retrieval system or transmitted in any form by any means; electronic, mechanical, photocopying or otherwise, without the express written permission from Marport. “Marport”, the Marport logo and Software Defined Sonar are registered trademarks of Marport. All other brands, products and company names mentioned are the trademark and property of its respective owners only. Marport is a division of Airmar Technology Corporation.

Disclaimer

Marport endeavors to ensure that all information in this document is correct and fairly stated, but does not accept liability for any errors or omissions.

The present user guide is applicable for the following versions:

- Mosa2: 02.11.x
- Scala2: 02.10.x

System requirements:

- macOS: from 10.12 (Sierra) to 12.04 (Monterey)
- Receiver firmware: from 08.02.11

Introduction & Presentation

Introduction and Presentation

Get a basic knowledge of the sensor.

Introduction

Trident is a netsonder with a wide angle of view. Placed on the headline, it is designed to work primarily on pelagic trawls.

The sensor is available in two applications:


- Trident Down Looking: it sends three echogram images of the area below the sensor, and one above.
- Trident Up Looking: it sends three echogram images of the area above the sensor, and one below.

Echogram ranges are configurable from 20 meters to 160 meters. Moreover, the sensor includes an automatic range mode, in order to have a better image resolution when the trawl is close to the bottom.




Applications

Overview of the system

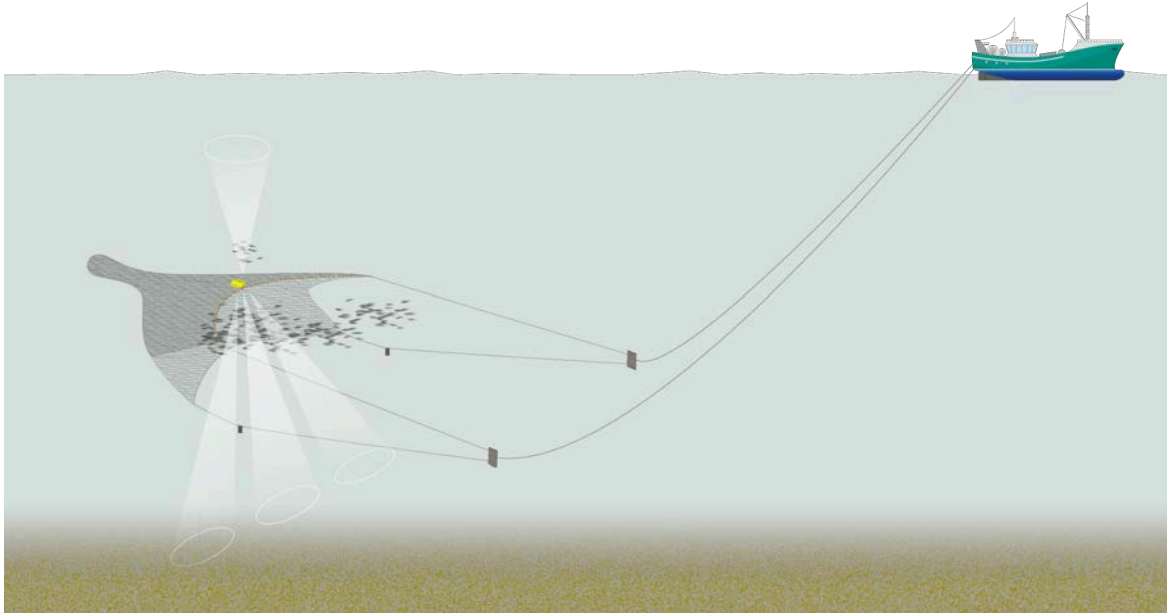

Examples of data received in Scala2

The image below shows data received from a Trident Down Looking sensor installed on the headline of the trawl gear.

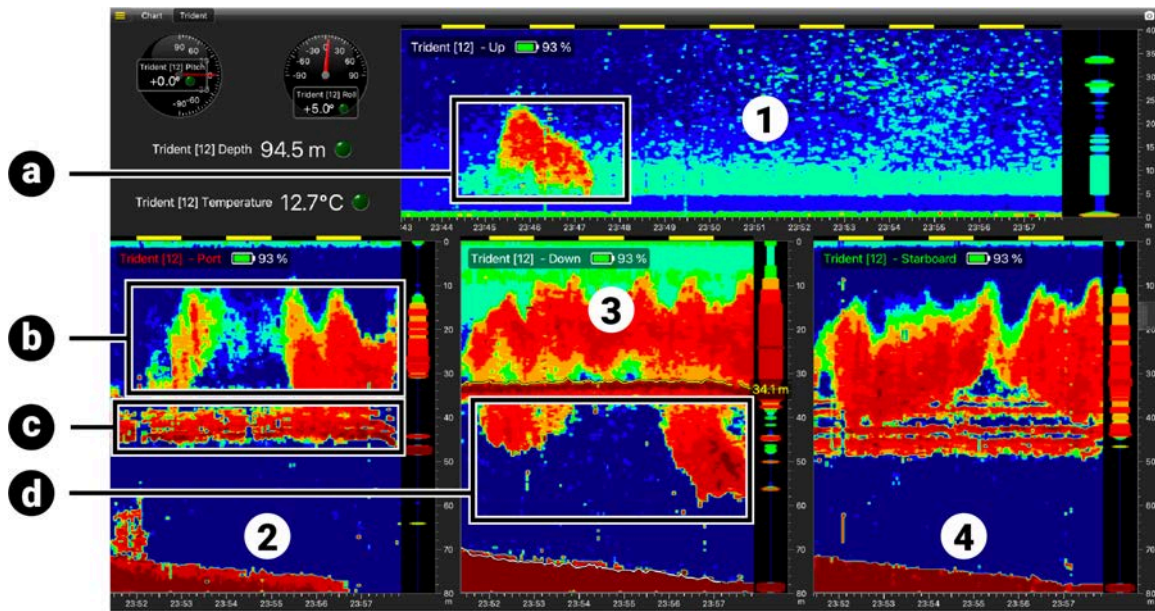

Detections

- a. Fish passing above the headline
- b. Fish inside the trawl
- c. Footrope
- d. Fish passing below the footrope

Sounding directions

- 1. Up sounding
- 2. Down port sounding
- 3. Down vertical sounding
- 4. Down starboard sounding

Safety Guidelines

! **Important:** To ensure proper and safe use of this equipment, carefully read and follow the instructions in this manual.

Product installation and use

Install and use this product in accordance with this user manual. Incorrect use of the product may cause damage to the components or void the warranty.

! **Warning:** Never place the product in a hazardous and/or flammable atmosphere.



Attention: Do not open the sensor bottle. Only qualified Marport dealers can do maintenance and repairs on internal components of the sensors.

Description

System Compatibility

Trident is compatible with the following versions of receiver firmware, Scala2 and Mosa2.

- Mosa2: 02.09.x or later
- Scala2: 02.08.x or later
- Receiver firmware: 08.02.11 or later
- Dock: 1.0.7 or later

Technical Specifications


Uplink frequency	30 to 60 kHz
Range to vessel	up to 2500 m*
Data update rate	<p>Trident Down Looking</p> <ul style="list-style-type: none"> • Down only: <ul style="list-style-type: none"> ◦ Ranges from 20 to 160 m: Echogram, temperature, depth, pitch, roll, battery level @2 s ◦ Automatic range (20 m): Echograms @1.1s - Temperature, depth, pitch, roll, battery level @2.2 s. ◦ Automatic range (10 m): Echograms @0.65 s - Depth, pitch, roll @2.6 s - Temp, battery level @5.2 s. • Down + Up (ranges from 20 to 160 m): Echogram, temperature, depth, pitch, roll, battery level @2.4 s
	Trident Up Looking

	<ul style="list-style-type: none"> • Up only (ranges from 20 to 160 m): Echogram, temperature, depth, pitch, roll, battery level @2 s • Down + Up (ranges from 20 to 160 m): Echogram, temperature, depth, pitch, roll, battery level @2.4 s
Depth range	up to 1700 m
Depth resolution	0.1 m with 0.1% of the full scale
Echogram range	10 (auto) / 20 / 40 / 80 / 160 meters
Pitch and roll range	-64° to +63°
Pitch & roll accuracy	+/- 1°
Temp measurement range	-5° C to +25° C
Temp accuracy	±0.1° C
Typical battery life	Up to 100 hours †
Charging time (from 0% to 100%)	<8 hours ‡
Battery type	Lithium-Ion
Weight in air (with housing)	13.48 kg
Weight in water (with housing)	5 kg
Warranty	2 years (Sensor & Battery) **

*Reference only. Depends on communication settings and transmission conditions /
† Depends on sensor uplink power and options. / ‡ Based on average charging time. /
**Marport Standard Marine Limited Warranty

The housing is delivered with 4 soft shackles: dimensions 7-10x100x100 mm, resistance up to 1 ton (+/- 10% tolerance).

Dimensions

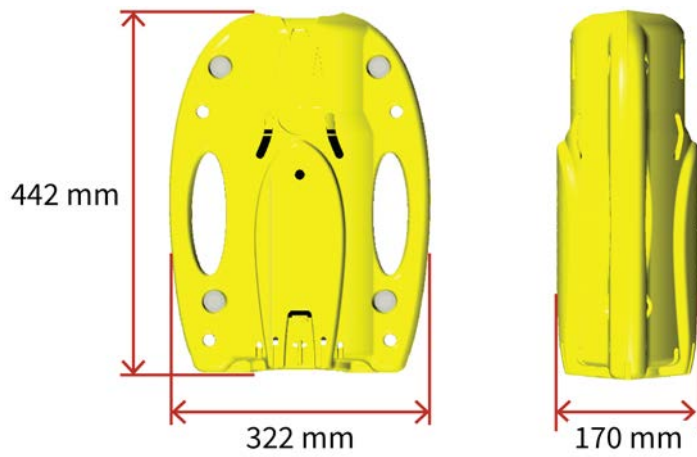

Main Parts

External View

Housing



1. Screw maintaining the bottle inside the housing
2. End cap
3. Transducer: oriented toward the vessel
4. Punches indicating the number of beams

Punches in the housing show the direction and number of the beams.


- **Trident Down Looking:** the face with one hole is facing up.



- **Trident Up Looking:** the face with three holes and one screw at the bottom is facing up.



End cap

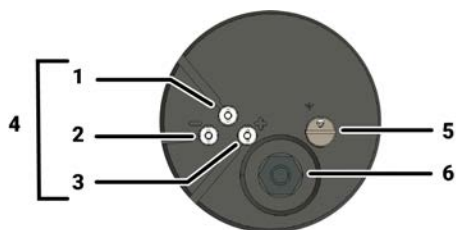

1. Water switch
2. Negative charge
3. Positive charge
4. Shoulder bolts
5. Pressure sensor
6. Temperature sensor

Sensor Configuration

Sensor Configuration

Learn how to configure the sensor settings.

Connecting the Sensor to Mosa2


To configure the sensor, you need to connect it to Mosa2 application, using either the Dock or the Configuration Cable.

Using a Dock Charger Plug






Tip: Refer to Dock user manual to have more details about the use of this product.

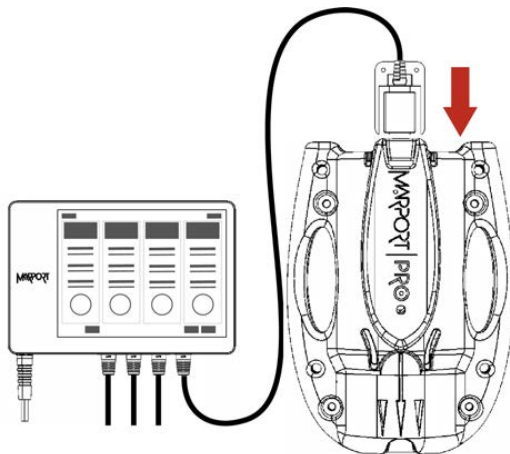1. Connect one Dock charging plug to the sensor's endcap.

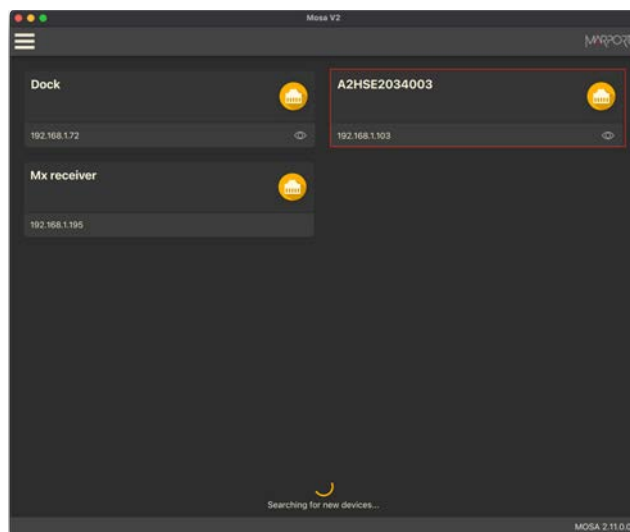

2. Mosa2 discovery page opens. The sensor is displayed.



- Click  to open the sensor configuration page.
- Click  to show the deploy animation on the charger plug for 30 seconds.

Using the Configuration Cable

Simply connect the Configuration Cable from the computer to the sensor to display the sensor configuration page on Mosa2.



Tip: Refer to the **Configuration Cable Quick Reference Guide** for more details about the use of this product.


1. Move other electrical devices minimum 1 m away from the computer.
2. Connect the USB connector directly to the computer.

Mosa2 opens automatically and the startup wizard is displayed. The LED on the plug is solid blue.



3. Connect the three-pin plug to the sensor.

The LED on the plug blinks alternatively blue and green.

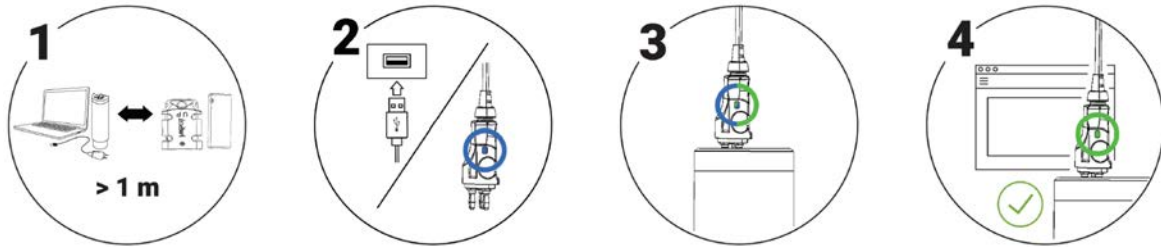4. Wait a few seconds. The configuration page of the sensor is displayed on Mosa2.
The LED on the plug is solid green.




You can now configure the sensor.


 **Note:** You can keep the Configuration Cable continuously connected by USB, and virtually eject or connect it. When no sensor is connected to the Configuration Cable, click **Menu**  > **Eject Config Plug** or **Connect Config Plug**. When ejected, you come back to the discovery page. It stays disconnected until you virtually connect to it or manually disconnect then connect it.

Battery Information

The battery lifetime is displayed on the first page.

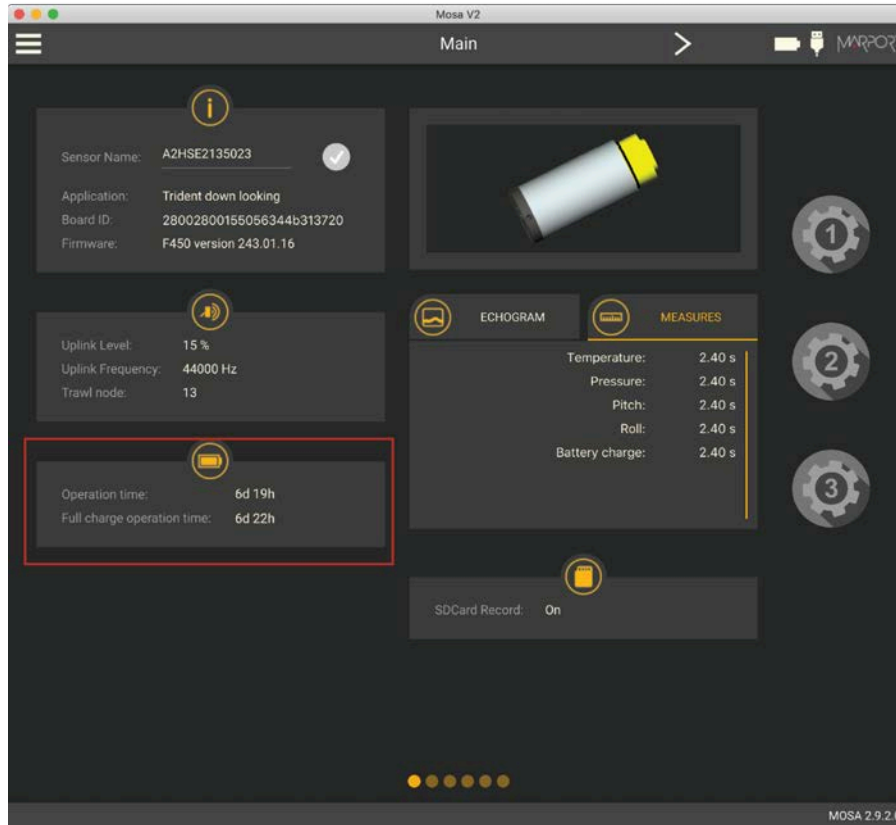

You can also check the battery level at anytime from the top bar:

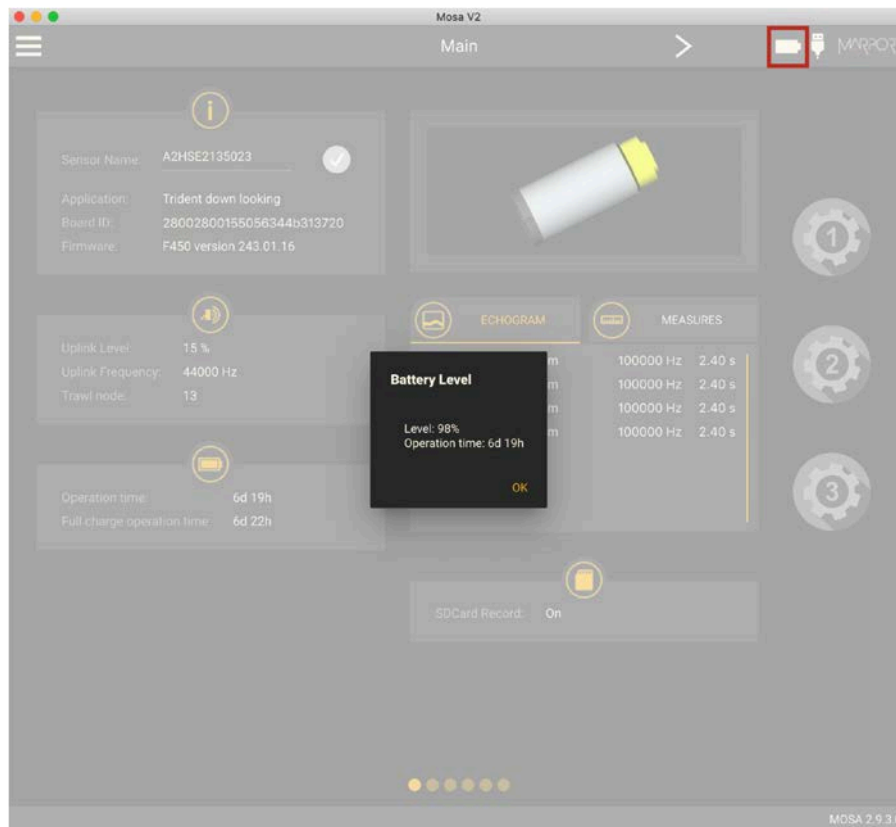


Note: When you change settings such as the uplink power or sounding range, it affects the battery level and remaining lifetime. The battery information will update after the sensor has been switched on and operating for 10 minutes.


Configuring the Trawl Node


You need to give a trawl node to the sensor. It is the number corresponding to the position of the sensor on the trawl.


The trawl nodes corresponding to the positions on the headrope and footrope are the following:

- Single trawl: 10 to 17
- Trawl 2: 110 to 117
- Trawl 3: 210 to 217
- Trawl 4: 310 to 317

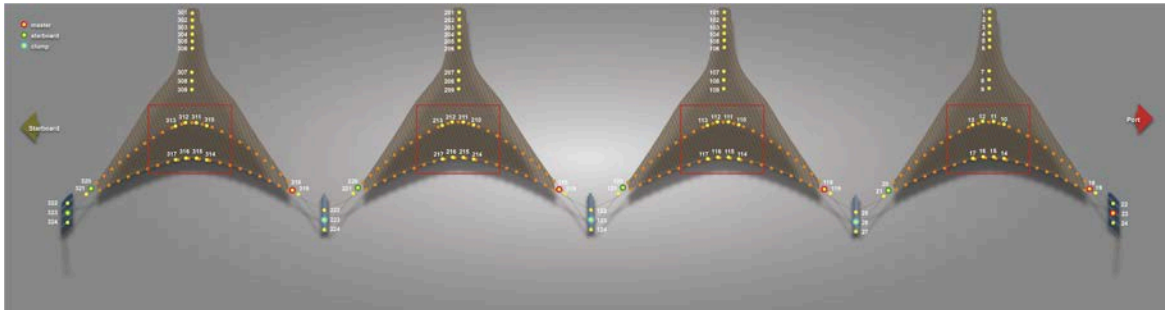


1. Go to the **Communication** page, then click  in **Uplink**.
2. Enter a node according to the position of the sensor on the trawl.

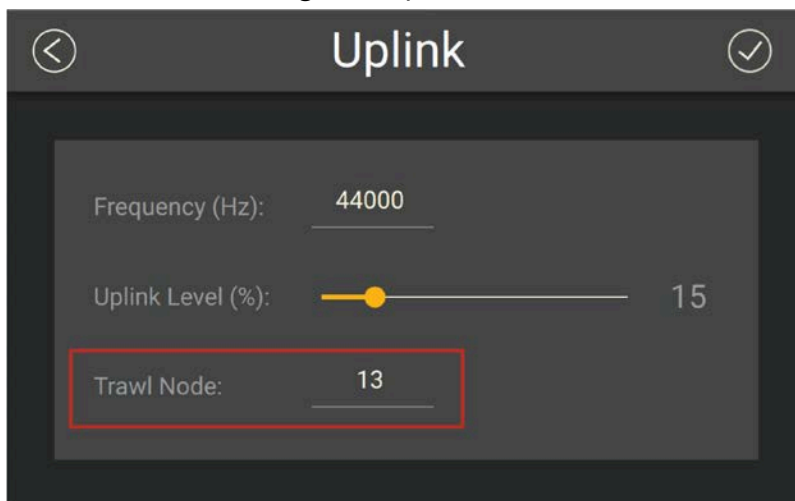

-  **Important:** Make sure to put the same number when adding the sensor to Scala2 receiver page. If not, change it accordingly.



Add Sensor Product		Add from Marport Sensor Configuration Tool
1. Product Category	Trawl Explorer	▼
2. Product Name	Trident Down Looking	▼
3. Trawl Gear Location	013	▼

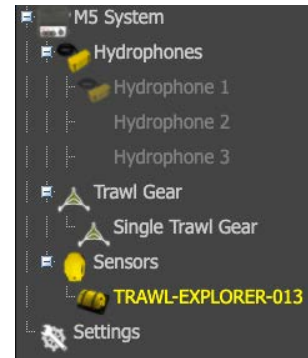


3. Click .

Configuring the Uplink Frequency and Power

Configure the settings of the communication link between the sensor and the vessel.

1. Go to the **Communication** page, then click  in **Uplink**.

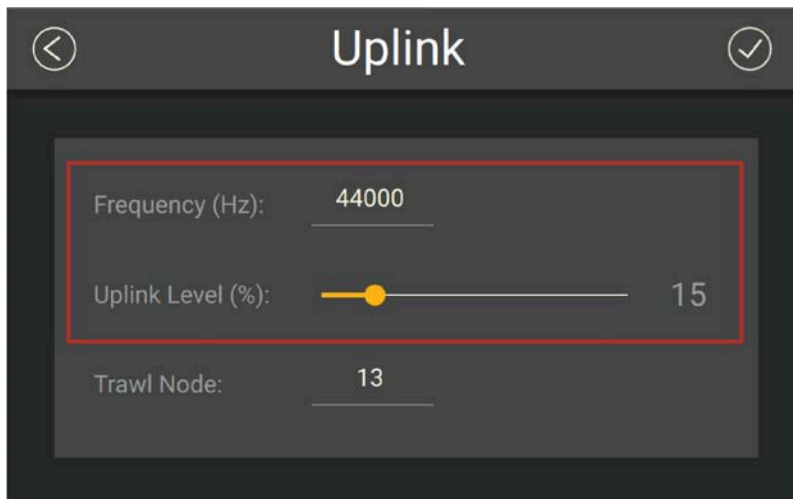

2. Enter a frequency for the communication with the vessel. Default is 44000 Hz.

3. Drag the slider to change the power of the uplink signal.



Note: A higher level of uplink power reduces the battery lifetime.



Recommend- ed uplink powers	Conditions	Estimated battery life
33%	Works for most conditions.	104 hours
100%	<ul style="list-style-type: none">◦ Sensor is far from vessel (e.g. more than 800 m depending on conditions, high depth)◦ High level of interferences◦ Issues receiving data◦ Low SNR	18 hours

Sounding Modes

The sensor sends echogram images to different directions depending on the application and sounding settings.


Down Looking Application

Down only



The sensor sends three echogram images of the area below: starboard (1), vertical (2), port (3).

Down + Up

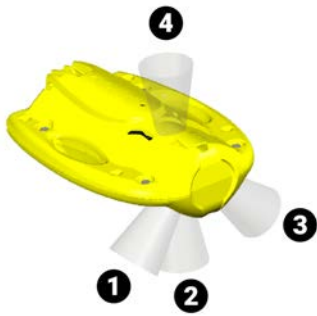


The sensor sends three echogram images of the area below and one echogram image of the area above (4).

The update rate is lower because the pings are distributed between up and down directions. As a result, data arrives more slowly to the receiver.

Up Looking Application

Up only

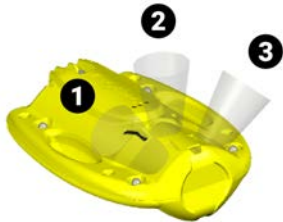

The sensor sends three echogram images of the area above: : starboard (1), vertical (2), port (3).

Down + Up





The sensor sends three echogram images of the area above and one echogram image of the area below (4).

The update rate is lower.


Configuring the Echo Sounder


You need to configure the echo sounder settings so that they correspond to the fishing conditions.

The sounding orientation of the channels changes depending on if the sensor application is down looking or up looking.

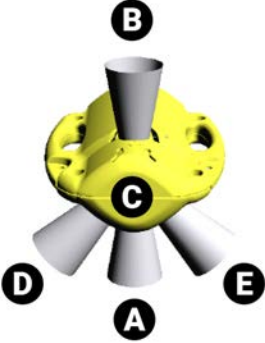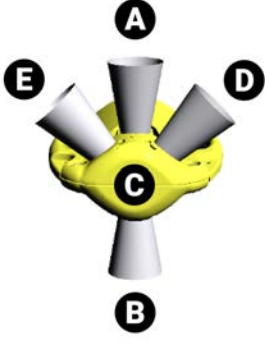Application	Picture	Transducer's channel	Orientation
Trident Down Looking		C	Fore
		A	Down
		B	Up
		D	Starboard
		E	Port
Trident Up Looking		C	Fore
		A	Up
		B	Down
		D	Port
		E	Starboard

! **Important: Ping Level, Ping Frequency, Pulse Type and TVG** are important settings for the calibration of the sensor. A new calibration is mandatory whenever one of these settings is changed.

1. Go to the **Echo Sounder** page, then click  in **Sounding Mode**.

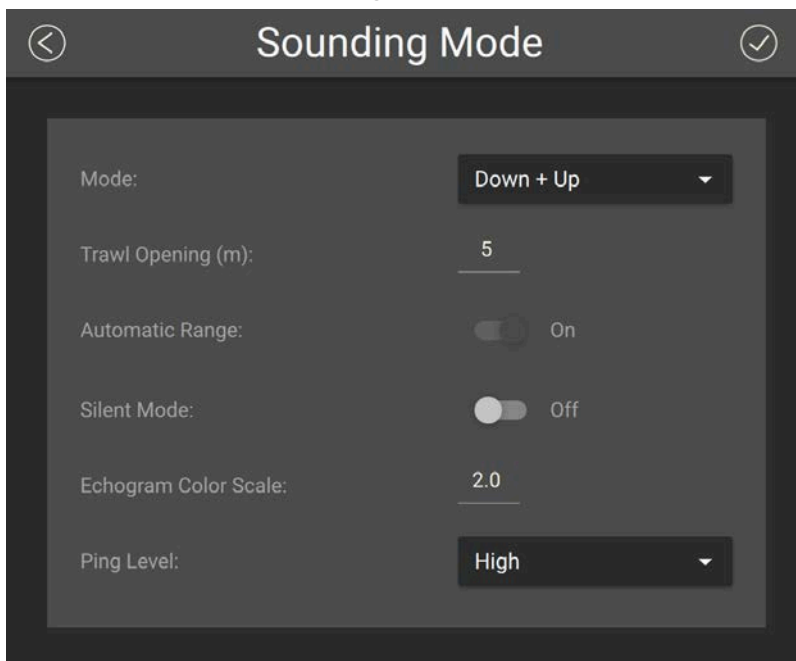

2. Select a **Mode**:

- **Trident Down Looking application:**

- **Down only** sends three echograms of the area below the sensor.



Note: You must select this mode to use the **Automatic Range** feature.

- **Down + Up** sends 3 echograms of the area below and 1 above the sensor.



- **Trident Up Looking application:**


- **Up only** sends three echograms of the area above the sensor.
- **Down + Up** sends 3 echograms of the area above and 1 below the sensor.




Note: Down + Up: Note that the data will have a slower update rate because the pings are distributed between the two directions.

3. You can activate the **Automatic Range** mode to have better quality echograms during bottom trawling. See **About the Automatic Range Mode (on page 27)** for details.
4. If using the **Automatic Range** mode, enter a **Trawl Opening**:

- lower than 19 meters to be able to switch to a 20 meter-range.
 - lower than 9 meters to be able to switch to a 10 meter-range.
5. **Ping Level** is the strength of the echogram signal. Default is **High**, but you can lower the level to **Medium** or **Low** if you notice that the sensor interferes with other equipment on the vessel.
 6. Click  to save the changes.
 7. On the **Echo Sounder** page, click  next to a sounding direction.

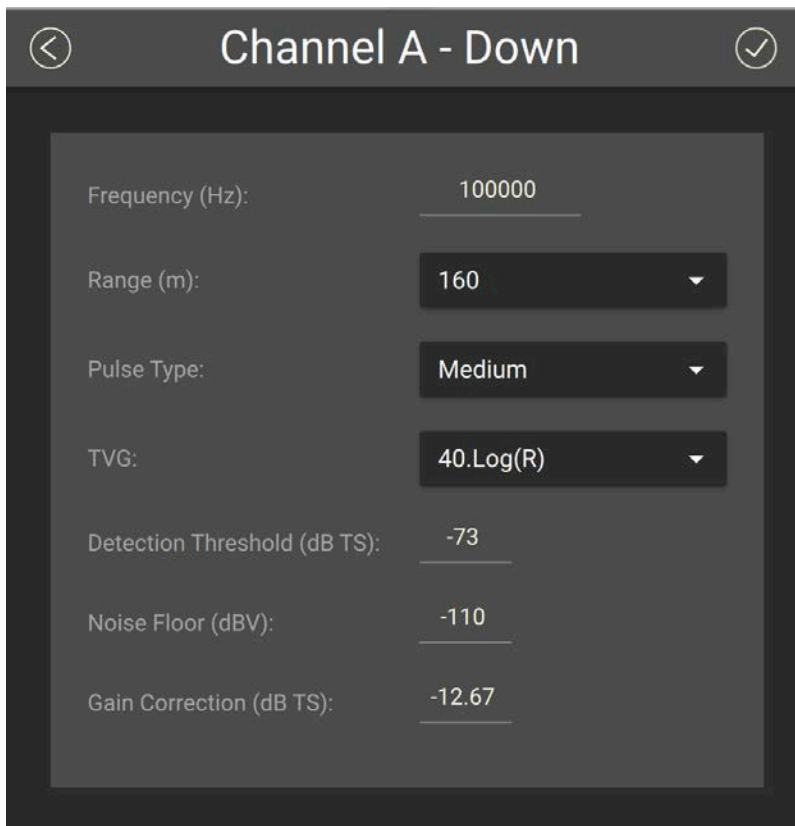

8. Set a **Frequency (Hz)**: it must be the same for all the sounding channels. Default is 100 kHz.
9. The **Range (m)** of the sounding is the maximum distance at which targets and bottom can be detected.
 -  **Tip:** We recommend to set the maximum range value when using the automatic range in order to see the sea bottom as soon as possible.
10. Select a **Pulse Type** to have an appropriate length of pulse according to the distance to the bottom:

- **Short:** shallow waters (100 μ s)
 - **Medium:** moderate depth (300 μ s)
 - **Long:** deep waters (500 μ s)
 -
11. Select a **TVG** setting to compensate the signal loss in water and have targets or sea bottom displayed in the same color on the echogram, whatever the distance from the sensor:
 - 20 log: focus on bottom or school of fish.
 - 40 log: focus on individual targets.
 - 30 log: compromise between the two above settings.
 12. Do not modify the other echo sounder settings.

About the Automatic Range Mode

The sensor has an automatic range mode that is useful to get better quality echograms when the trawl is close to the bottom.


Principle

The range influences the display of echogram images. The smaller the range, the shorter the listening time, which gives better quality images. But the bigger the range is, the lesser the image quality is, because data arrives slower.

You can activate the automatic range mode if you need to get better quality echograms when the trawl is close to the bottom. This mode is recommended when bottom trawling.

The echogram can automatically switch to a 20-meter range when the distance to the bottom is less than 20 meters and to a 10-meter range when the distance is less than 10 meters.


The change of range depends on the settings configured on Mosa2.


 **Important:** This mode is available only with Trident Down Looking application.

Mosa2 settings

The following **Sounding Mode** options must be set in Mosa2:

- **Automatic Range** must be activated.
- The **Mode** must be set to **Down only**.
- The **Trawl Opening**:
 - must be lower than 19 meters to be able to switch to a 20-meter range.
 - must be lower than 9 meters to be able to switch to a 10-meter range.




 **Note:** The trawl opening value sets the minimum distance to see inside the trawl. As a result, if the trawl opening distance is equal or higher than 19 or 9 meters, the sensor will not reduce the range respectively to 20 or 10 meters.

 **Note:** If the echosounder is configured with a range of 20 m, the 20 m automatic range is activated by default.



See **Configuring the Echo Sounder (on page 24)** for details about Mosa2 settings.


Applying Offsets to Measurements

You can apply offsets to temperature and depth measurements if the measured values does not correspond to the environment of the sensor.

1. Press command + A or click **Menu**  and click **User Mode > Advanced**.
2. Go to **Measurements** page and click  next to depth or temperature to apply offsets.
3. Enter a target value. Click .

The measured value becomes the same as the target value. The value of the offset is displayed.

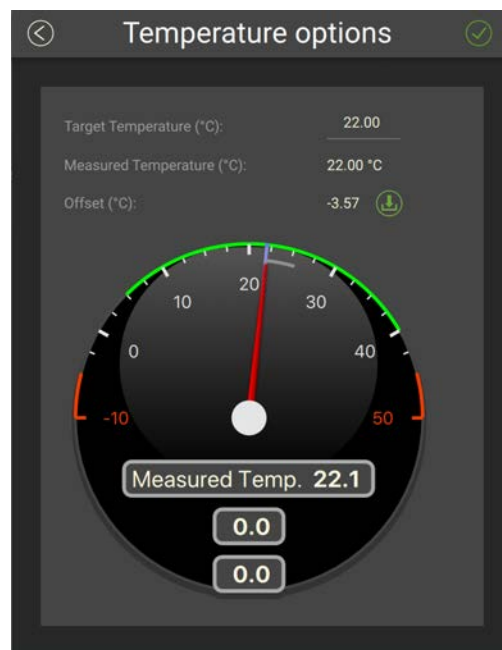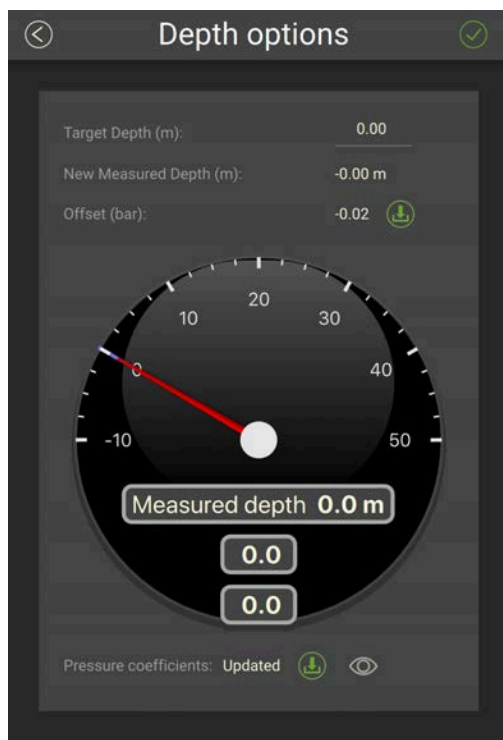

4. If you need to reuse offsets from a previous configuration, click  then select the configuration file (*.A2C).


Testing Measures

You can test the measures taken by the sensor (e.g. battery level, temperature, depth) to check that there are no faults.

You can test the sensor in water or in air. In air, the following measures will be wrong: height, conductivity.


1. Press command + A or click **Menu**  and click **User Mode > Advanced**
2. Go to the **Monitoring** page.


You can check information about the battery, board and sensor.

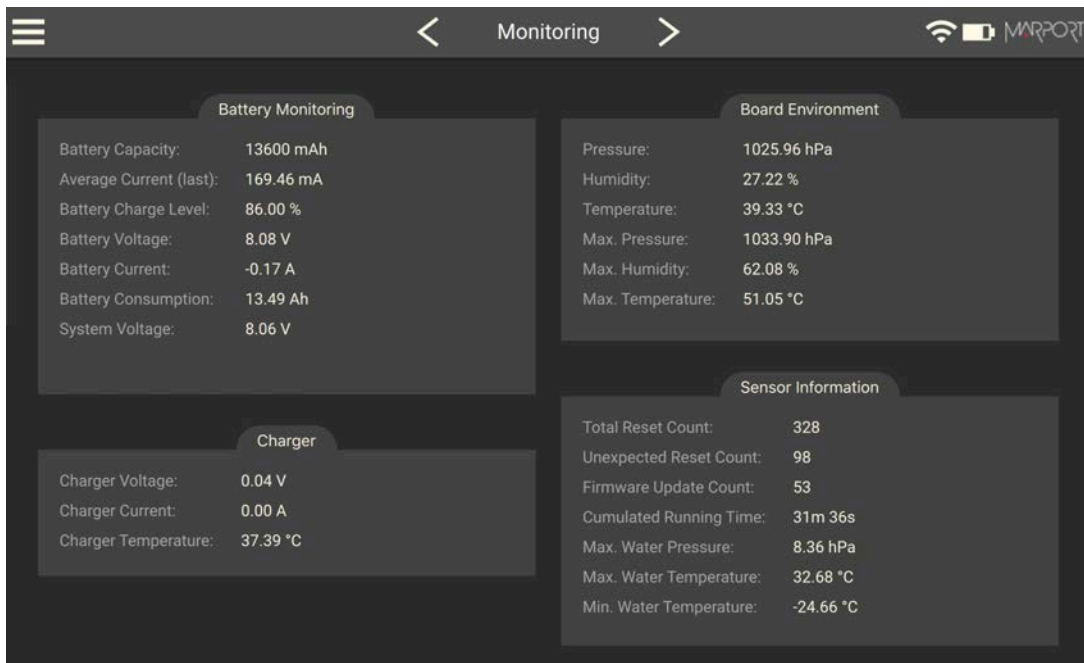

3. Go to the **Measurements** page.

You can see the values of the activated measures, such as depth, temperature. If the sensor is working correctly, measures are updating.

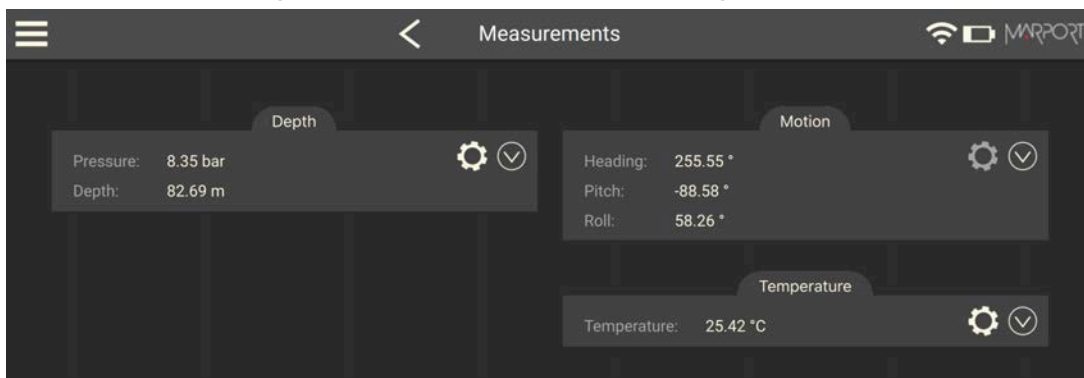

4. Click  to check and, if necessary, adjust data measured by the sensor:
- **Depth:** Place your sensor on a desk or on the ground and enter 0 in **Target Depth**.
 - **Temperature:** Enter the estimated temperature of your environment.


SD Card Recording

This topic explains the SD card recording feature (this feature is optional).

Overview


Data recorded on the SD card are in higher resolution, with a higher rate.


You can see on Mosa2 main page if the SD card recording feature is activated:

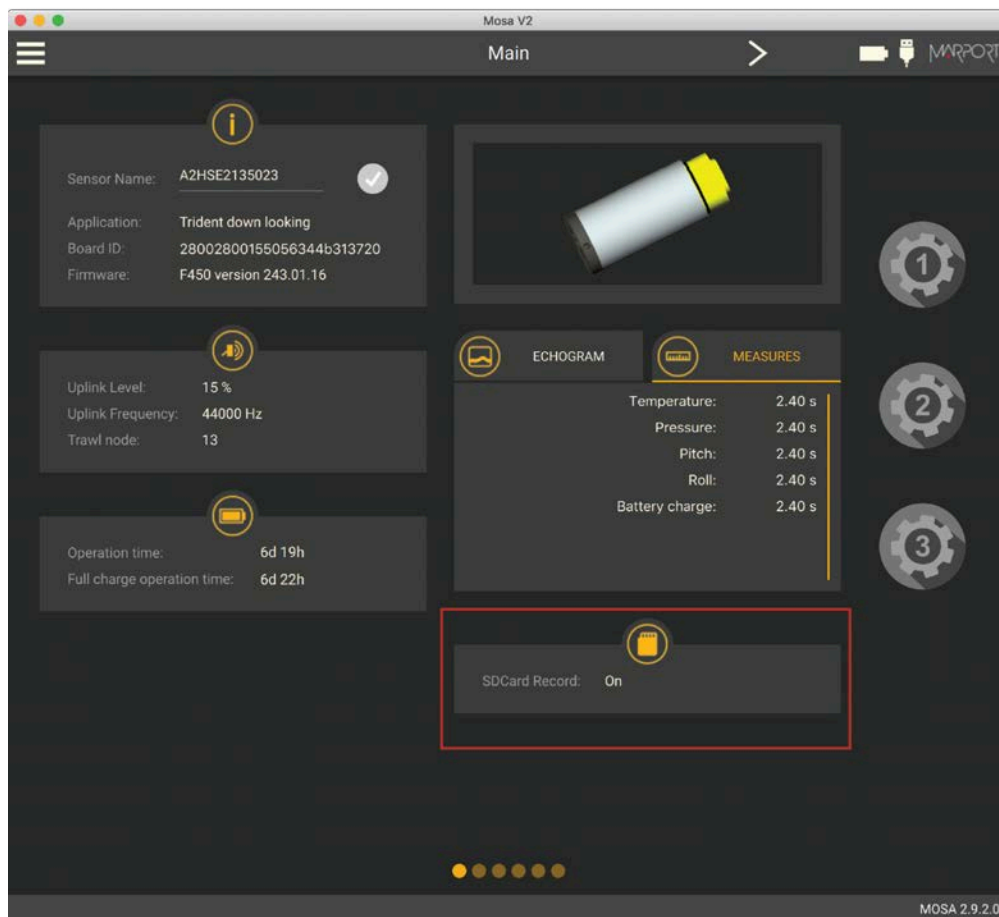

Additional settings

We recommend to activate the support logs to help support teams for error diagnosis.

1. Go to the **Communication** page, then click  in **Recording**.
2. Activate **Additional support Log**.

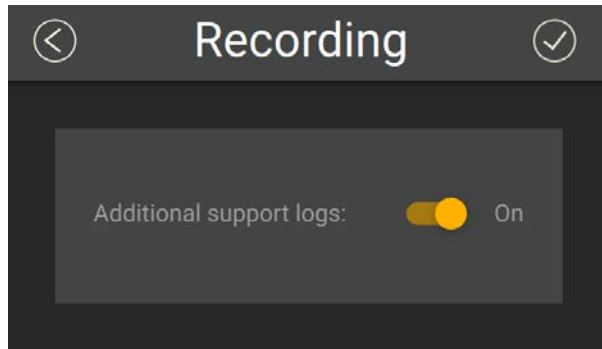


Getting data from the SD card


Only the last 99 recorded sensor data files and last 99 battery files are displayed. Two types of files are on the SD card:

- Files containing measures recorded by the sensor. Their name begins by "450". These data are more precise and recorded more often than data received on the receiver. One file corresponds to a tow (time between entering and leaving water). The recording date displayed in the second column is synchronized with your computer time.
- BATT = Files created when the sensor is charging (1 file per charging cycle). They are useful for support teams for troubleshooting.

1. Press command + E or click **Menu**  and click **User Mode > Expert**.
2. On the first page, click  in **SDCard Record**.

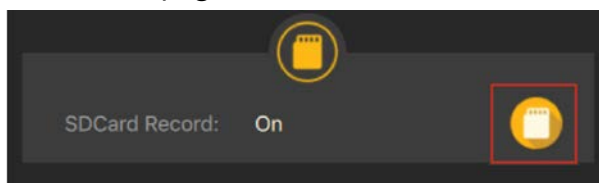

Recorded files are displayed. Click the title of the columns to sort them by their name, date or size.

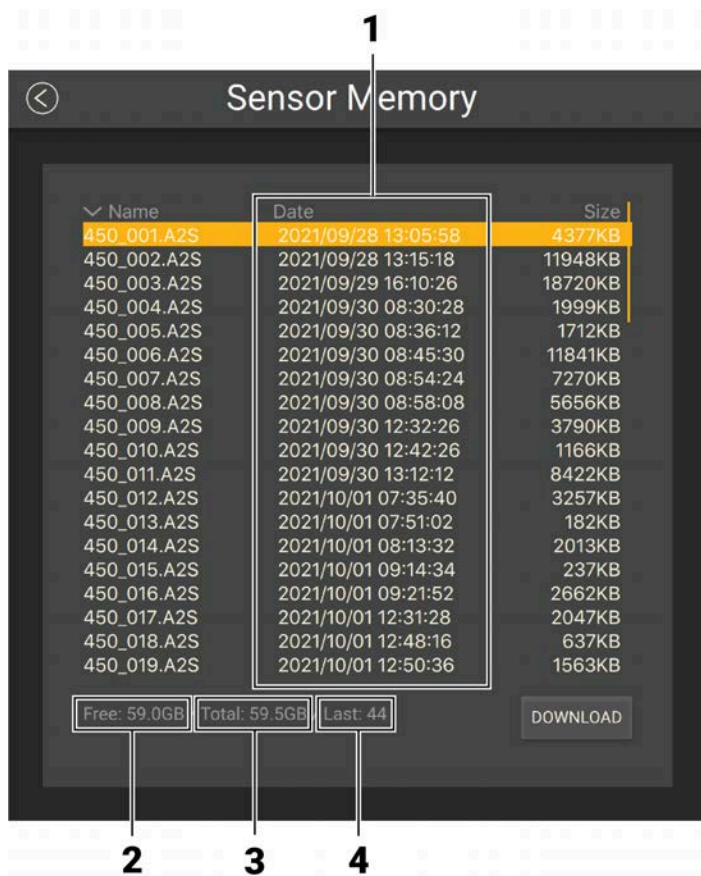

1. Time of end of towing
2. Memory size of SD card
3. Free memory on SD card
4. Number of files


Saving a Configuration on Mosa2


You can save different configurations of the sensor to be able to quickly change the configuration when you change your fishing method.

- You have finished configuring the sensor.

You can have up to three different configurations for the sensor. When you change your fishing method, you can apply a corresponding configuration in one click. For example:


- If fishing in shallow water, you can use a configuration with an uplink level of 20%, a short pulse and a short range.
- If fishing in greater depths, you can change for a configuration with an uplink level of 60%, a long pulse and a long range.

1. When you are finished configuring the sensor, for example to use the sensor in shallow water, click one of the wheel icon  on the first page of Mosa2.
2. In the window that appears, enter a name for the configuration and save it. The wheel icon becomes orange and the name of the configuration is displayed underneath.

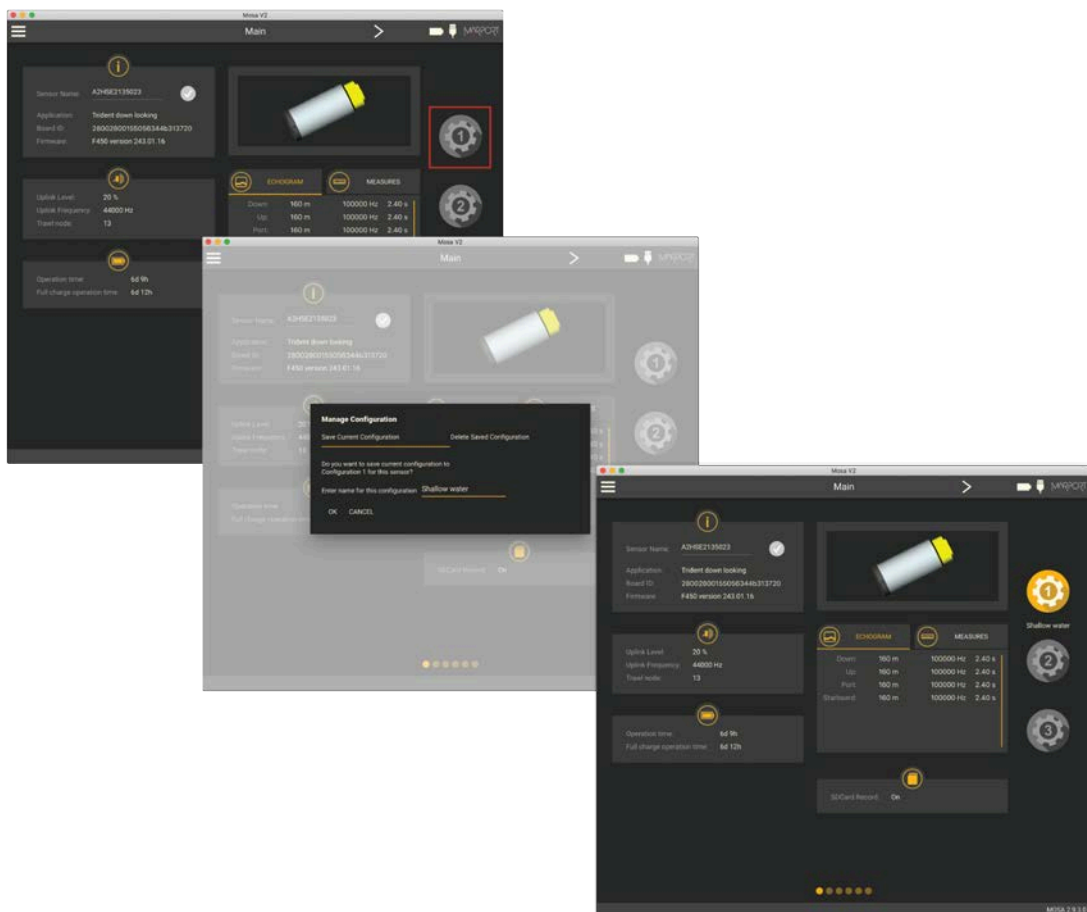

3. To create another configuration, for example this time to use the sensor in deep waters, change the settings of the sensor on Mosa2.

4. When you are finished, click the second wheel icon and save the configuration.

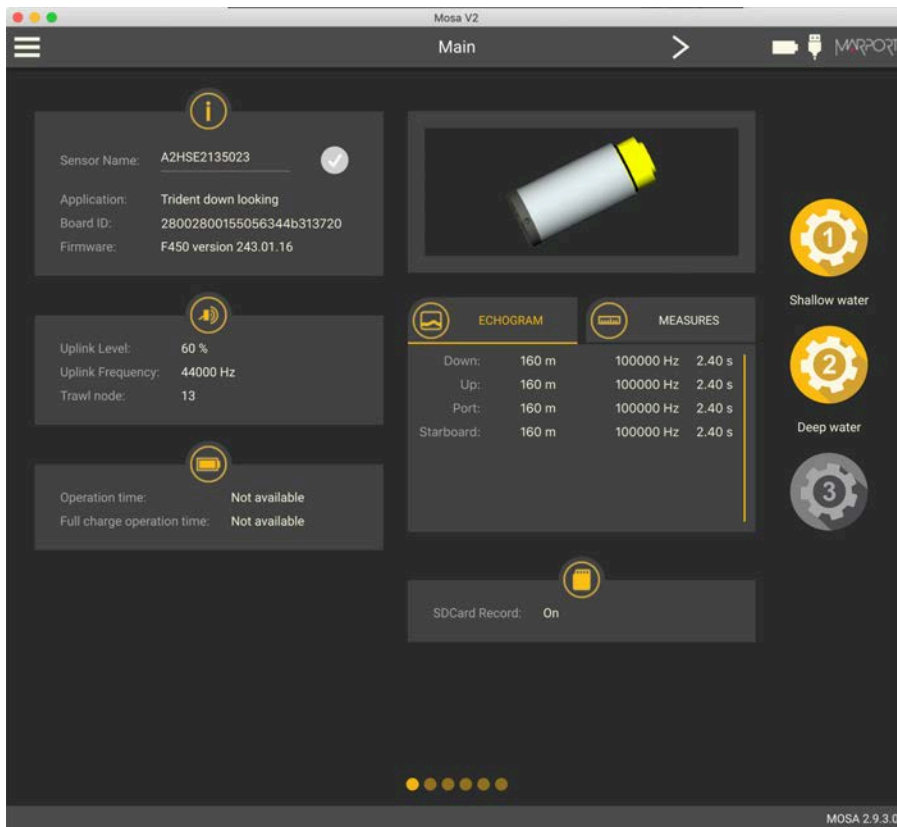

5. If you need to change the sensor configuration back to the first configuration (shallow water), click the corresponding wheel.

The configuration is applied.

6. If you need to make changes to a configuration:

- Change settings.
- Maintain the click on the corresponding wheel until the **Manage Configuration** window appears.
- Click **OK** in **Save Current Configuration**.

7. To delete a configuration:

- Maintain the click on the corresponding wheel until the **Manage Configuration** window appears.
- Click **OK** in **Delete Saved Configuration**.

Exporting Sensor Configuration

You can export the sensor settings you configured on Mosa2 on a file. You can afterward use this file when configuring a similar sensor.

- You are finished configuring the sensor.


If you have issues with your sensor, send this file to support teams.

1. Click **Menu**  > **Export**.



2. From the window that appears, choose a folder on your computer to save the file and click **Open**.

The configuration file is exported and saved on your computer as an A2C file. If you are connected to the internet, it is also automatically sent to MASP in XML and PDF files:

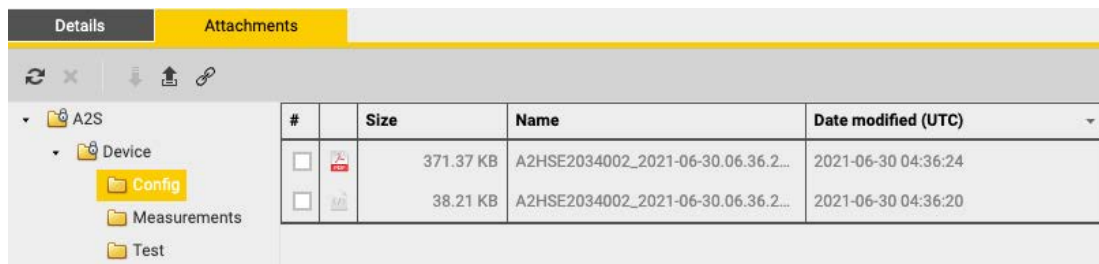

Importing a Sensor Configuration


You can apply to a sensor a configuration that has already been made on another sensor.

- You have exported a configuration (see **Exporting Sensor Configuration (on page 36)**) and have the *.A2C or XML configuration file.

Only the following settings are imported: trawl node, recording settings (SD card, support logs), communication options (virtual water switch, simulation mode), uplink level and frequency, echo sounder settings.

! **Important:** If the new configuration change the echo sounder settings, you must re-calibrate the sensor for target strength value.

1. Press command + A or click **Menu**  and click **User Mode > Advanced**
2. Click **Menu**  > **Import**.

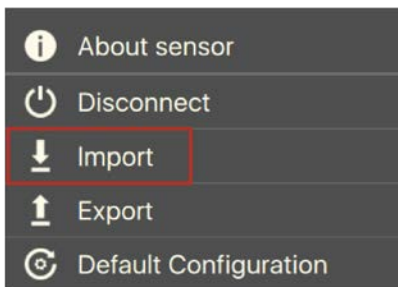

3. From the window that appears, select the *.A2C or XML configuration file.

The configuration is loaded into the sensor.

System Configuration & Display

System Configuration and Display

Learn how to configure the receiver and display the sensor data in Scala2 application.


Adding the Sensors to the Receiver


You need to add the sensors to the receiver in order to display their data on Scala2.

Adding the Sensors to the Receiver

You need to add the sensors to the receiver using the system web page.

! **Important:** To be able to add the Trident sensor to the receiver, the version of the receiver firmware must be **08.01.01 and above**.

1. From Scala2, click **Menu**  > **Expert Mode** and enter the password `copernic`.
2. Right-click the IP address of the receiver at the bottom of the page, then click **Configure Receiver**.
3. From the left side of the receiver page, click **Sensors**.

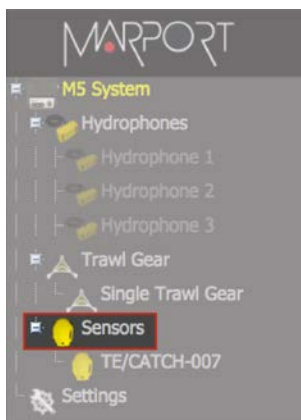




4. From the page **Add Sensor Product** select:
 - a. **Product Category:** Trawl Explorer
 - b. **Product Name:** Trident Down Looking or Trident Up Looking.
 - c. **Trawl Gear Location:** same as defined in Mosa2 (see **Configuring the Trawl Node (on page 19)**).

Add Sensor Product		Add from Marport Sensor Configuration Tool	
1. Product Category	Trawl Explorer		▼
2. Product Name	Trident Down Looking		▼
3. Trawl Gear Location	013		▼

Configuring Sensor Settings

You need to complete communication settings when you add the sensor to the receiver.

! **Important:** Make sure the settings you enter here are the same as in Mosa2.

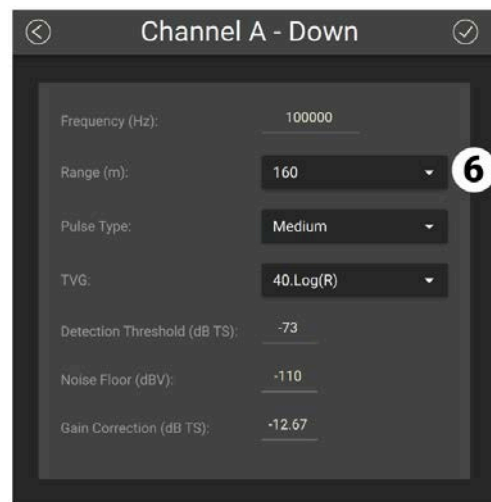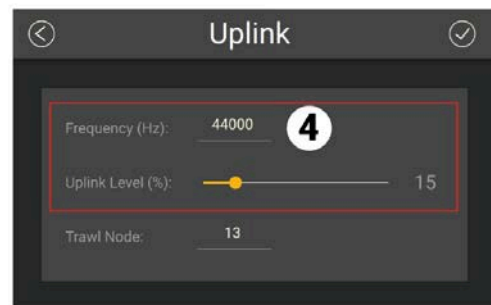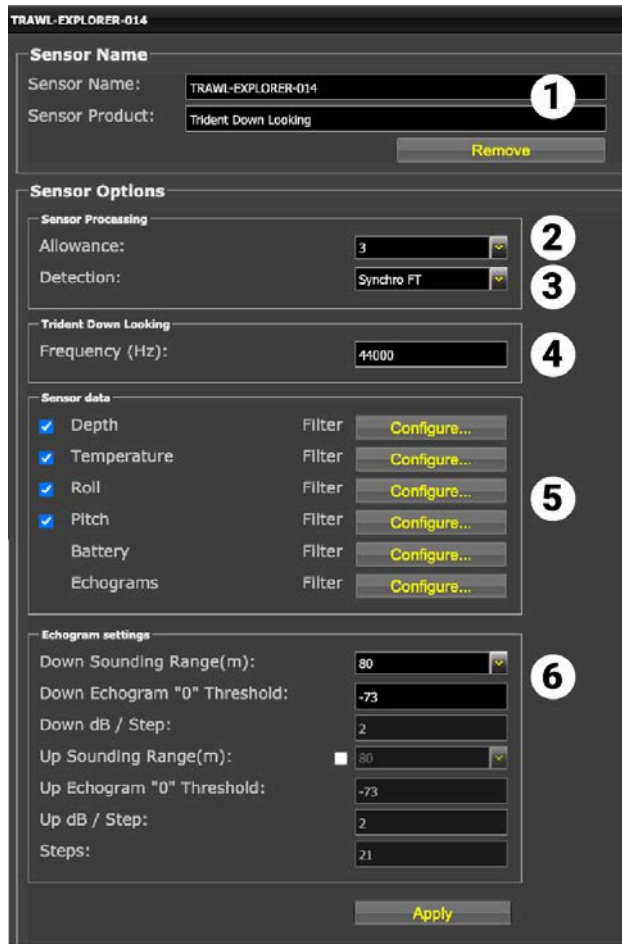

1	Sensor name displayed in Scala2 and its features.
2	Not used.
3	Leave default setting at SynchroFT .
4	Enter the same frequency as the one entered for the uplink frequency in Mosa2.
5	Click Configure to change filters applied on incoming data. Filters are particularly useful to reduce interferences on the echogram data.



Note: Filters should not be necessary. However, if you notice interference, you can apply filters such as **Some Smoothing**, **More Smoothing** or **Rate of Change**. Be aware that echogram filters such as **Echosounder and Interference Reduction** may remove small targets on the echogram.



Tip: Please refer to Scala2 user guide for more information about the filters.


6

Select the same sounding range and threshold as those set in Mosa2.


Click **Apply** when you have finished.

Configuring Data Display on Scala2


You can display the sensor's measurements and echograms on Scala2 pages.

Connect in **Customize** mode to configure the display of data. From the top left corner of the page click **Menu**  > **Customize** and enter the password `eureka`.


1. Open the control panels and go to the **Mx** tab.
2. To display the echograms, click + hold **Sonar Data** from a Trident sensor and drag it to the page display. Repeat for the other sonar data (depending on the sensor options: port, starboard, up, down).

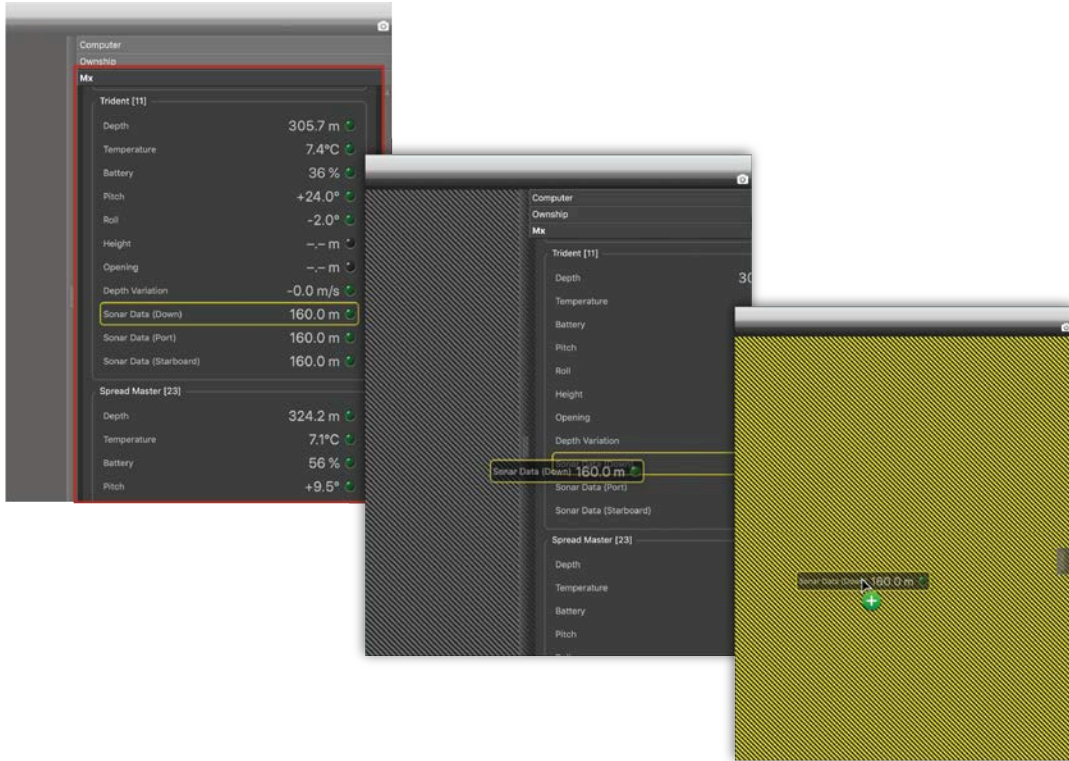


3. Click + hold other data, such as depth, pitch, roll, and drag it as well to the page display.

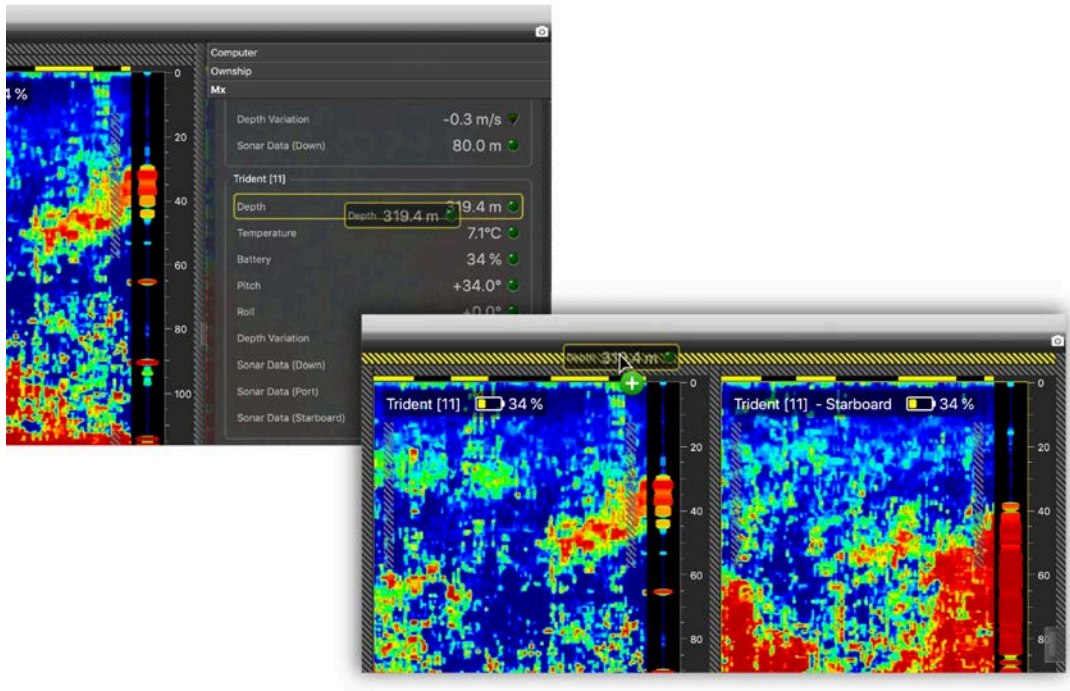


4. Select the type of display.

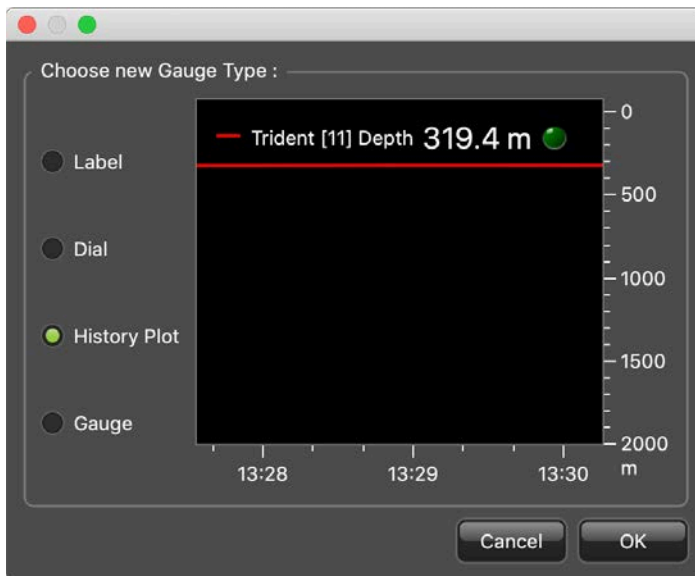

5. Drag the lines around the blocks of data to resize them.

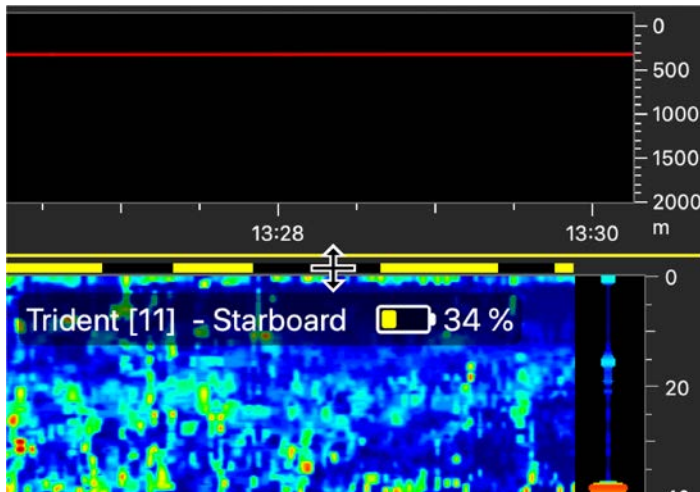


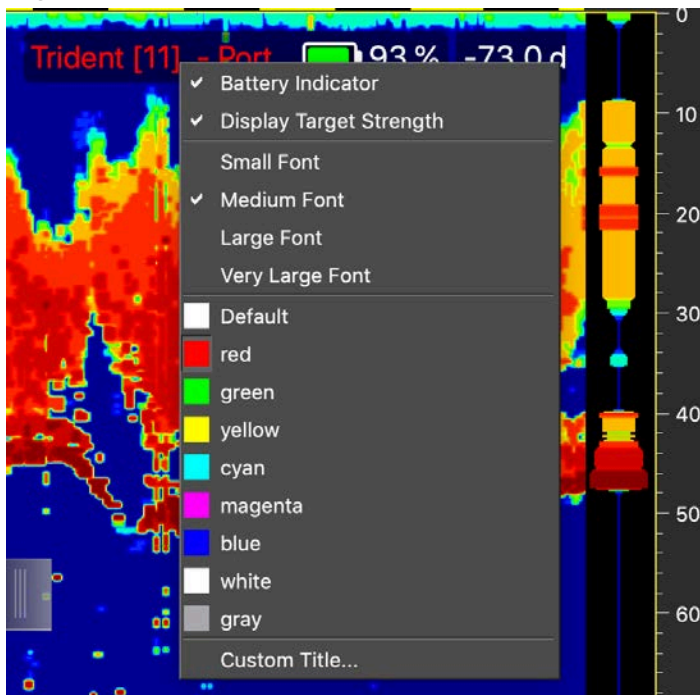

6. Right-click the title or the values of the data to display customization options.



7. To save the changes, right-click the tab with the name of the page and click **Save Changes**.

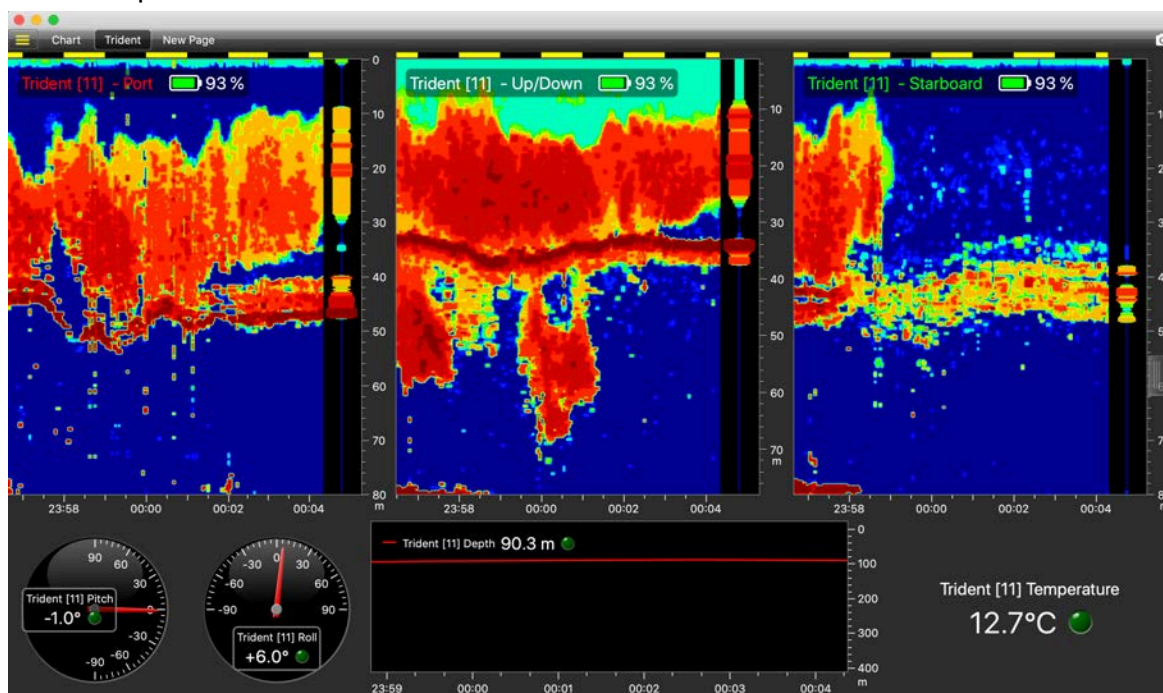
When you have finished customizing the page, you can have a screen display such as in this example.



 **Note:** Deactivate the Customize mode when you have finished customizing pages: click **Menu**  > **Customize** again.


Replaying Data

You can replay data that have been recorded by A2S sensors in high definition.


 **Note:** Data in high definition is available only when downloading them from the SD card of A2S sensors. Data received in Scala2 in live will have a lower definition.

1. Download A2S files from Mosa2
2. Right-click the timeline and click **Change Directory** to choose the source directory where A2S files are stored.

In the replay bar, the recording period of A2S files is displayed in green.

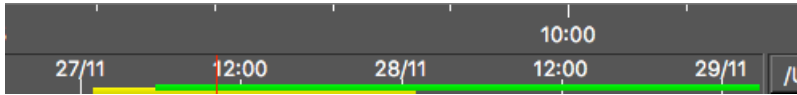

In the control panels, data that were received in live are displayed in the **Mx** panel and data recorded on the SD card are displayed in the **A2S Data** panel.

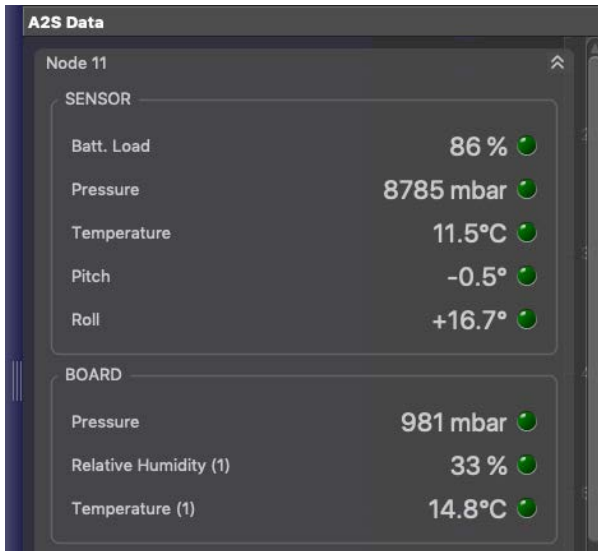

3. Go to the control panels, then click and drag data from the **A2S Data** panel to a page.

Installation

Installation

Learn how to install the sensor on the trawl gear.

Installing the Sensor on the Trawl

The Trident sensor must be installed on the headline using appropriate equipment.

1. Place the sensor on the center of the net's headrope. The side with arrows must be oriented toward the vessel. Make sure the beams are oriented correctly, depending on the sensor application:

- **Trident Down Looking:** the face with one hole is facing up.



- **Trident Up Looking:** the face with three holes and one screw at the bottom is facing up.



2. Attach the sensor to the net using four soft shackles.



 **Note:** See **Technical Specifications (on page 10)** for shackles specifications.

3. You can add floats on either sides of the sensor to stabilize it and have pitch and roll values between $\pm 5^\circ$.

Maintenance & Troubleshooting


Maintenance and Troubleshooting


Read this section for troubleshooting and maintenance information.


Charging the Sensor with the Dock

Connect a sensor to one of the 4 charging connectors of the Dock to display its level of charge.


- Make sure the Dock is connected to a power supply and turned on.

 **Warning:** In case of water ingress in the product, do not charge it: battery may vent or rupture, causing product or physical damage.


 **Note:** For Dock products with serial number before DOC2107XXX: Do not leave the sensors connected on a charger that is switched off. If the charger is not connected to the mains voltage, the sensor switches on and this will drain the battery.

 **Note:** Avoid full discharges and charge the battery whenever possible, at any battery level. Lithium-ion batteries do not have a charge memory, so they do not need full discharge cycles.


1. Before charging the sensor: wash with fresh water and dry the sensor. This prevent corrosion of the charging pins.

 **Important:** Check that the charging pins are not damaged. If they are, contact you local Marport dealer for replacement.

2. Connect the charger plug to one of the 4 charging ports.

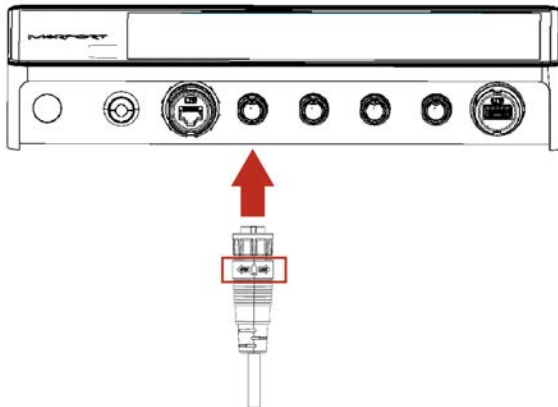

3. Connect the 3-pin charging connector to the sensor charging pins.

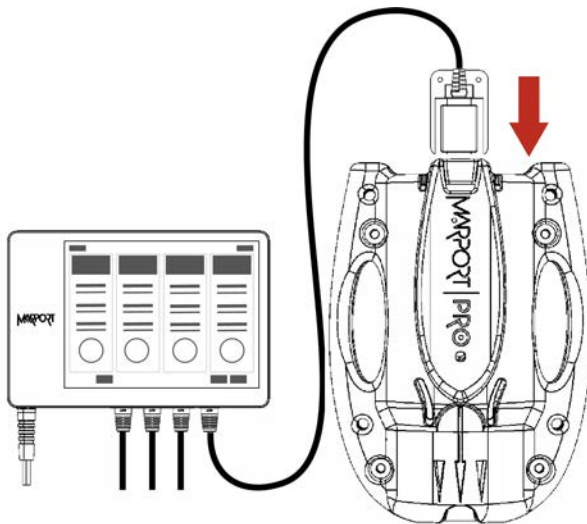

The Dock screen and Virtual Charger Room display the state of charge of the sensor. A full charge takes approximately 7 hours.


Cleaning the Sensor


You need to regularly clean the sensor for proper performance.

Wash the sensor with fresh water and dry it before you charge or store it.

Regularly check that the sensor is clean. If not:

- Remove any marine life with a piece of wood or screwdriver.
- Wash away mud or debris with warm water.

 **CAUTION:** Do not use highly abrasive materials or jet wash.

 **CAUTION:** Special care should be taken with sensors and components sensitive to mechanical shock or contamination.

Maintenance Checklist

We recommend you to follow this maintenance schedule for better performance and to avoid any trouble with the equipment.

Before use	<ul style="list-style-type: none"> • Check that all attachment equipment are not worn or torn. Replace when appropriate. • Check that the sensor is clean. See Cleaning the Sensor (on page 53) for cleaning procedures. • Check the battery level 24 hours before use and recharge if necessary.
After use	Wash the sensor with fresh water.
Between uses	When the sensor is not in use, store in a dry area, without humidity, at a temperature between -10° and 70 °C (14 to 158 °F).
Not used for more than 3 months	<ul style="list-style-type: none"> • Do not leave the batteries at full charge or discharged for a long period of time or they will wear out. • Every 6 months, put the sensor in charge for less than an hour.
Every 2 years	The sensor must be returned to an approved Marport dealer for inspection and maintenance.

If the sensor has not been used for more than 3 months, we highly recommend to check the following points before using it:

- Make sure the sensors on the end cap are in good condition and clean.
- Connect the sensor to a charger and check the charging status.
- Switch on the sensor by shorting the center lug to the negative lug, then listen for a ping noise and check if you see the LED switched on.
- Test the sensor measures with Mosa2: depth, temperature, pitch, roll, and if applicable: spread distance, echogram, catch status, speed measures (using the EM log tester).
- If you have a test hydrophone, check the reception in the wheelhouse with Scala.

Troubleshooting

Learn how to solve common problems.

Mosa2 does not open due to error message

Mosa2 displays an error message saying it cannot be opened.

→ Your Mac security preferences do not allow you to open applications not downloaded from the App Store.

1. From the upper left corner of the screen, click **Apple menu > System Preferences > Security & Privacy**.
2. Click the lock icon and enter the password, if applicable.
3. At **Allow apps downloaded from**, select **Anywhere**, then close the dialog box.
4. **macOS Sierra or later: Anywhere** option is not displayed by default. To display **Anywhere**:
 - a. Click the magnifying glass from the top right corner of your screen and type `Terminal`.
 - b. Click **Terminal** from the results.
 - c. Enter in the terminal: `sudo spctl --master-disable`.
 - d. Press Enter.

Anywhere option is now displayed in **Security & Privacy** preferences.

Sensor does not connect correctly with Mosa2 when using the Configuration Cable



Remember: If the sensor does not connect correctly with Mosa2, always:

- Disconnect both USB connector and three-pin plug.
- Connect again the Configuration Cable.
- Make sure the three pins are fully inserted inside the sensor.

→ Mosa2 does not automatically open when connecting the Configuration Cable.

- Check that you see Marport Captain icon in the desktop taskbar. If you do not see it: close, then open Mosa2. The icon should appear in the taskbar.



Note: Marport Captain is a program running in the background. It allows Mosa2 automatic opening and displays shortcuts to Mosa2 and Scala applications installed on the computer. It should not be closed.

- If the problem persists, install Mosa2 again.

→ At the end of step 2 of the configuration wizard, the sensor does not respond.

- Connect the sensor to a charger and wait until it is fully charged.

→ The sensor has been disconnected from Mosa2.

- Check that the Configuration Cable is not connected to a USB hub. The Configuration Cable must be connected directly to the computer.
- If the computer goes to sleep mode, the sensor may be disconnected. Change the settings on your computer to increase the time before sleep mode.
- If the problem persists, connect the sensor to a charger and wait until it is fully charged. Then try again to connect.


→ Mosa2 displays a critical error message.


- Disconnect both USB connector and three-pin plug. Then, connect again the Configuration Cable. If the message is still displayed, it means there is an issue with the sensor's components. Contact Marport support.

The echogram has a lot of interference


→ There are interference from environmental noise or other equipment such as echosounders. You need to increase the level of the echogram filter in Scala2.

! **Important:** Increase the level of the echogram filter only if the echogram has a lot of interference. Be aware that this filter will remove small targets.


1. From Scala2, click **Menu**  > **Expert Mode** and enter the password `copernic`.
2. Right-click the IP address of the receiver at the bottom of the page, then click **Configure Receiver**.
3. Click the name of the sensor in the system tree view.
4. In **Sensor Options**, click **Configure** in front of **Echograms**.

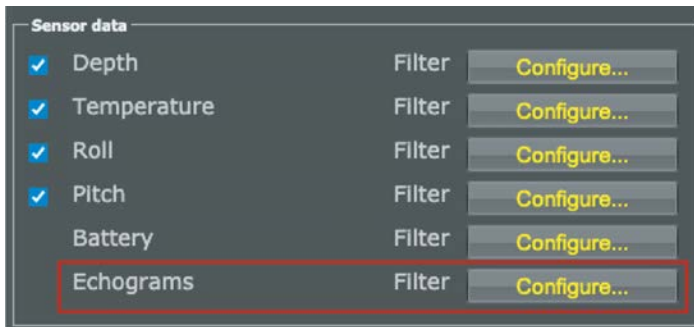

5. In **NBTE Echograms Filter**, select **Echosounder and Interference Reduction Medium** or **Echosounder and Interference Reduction High**.

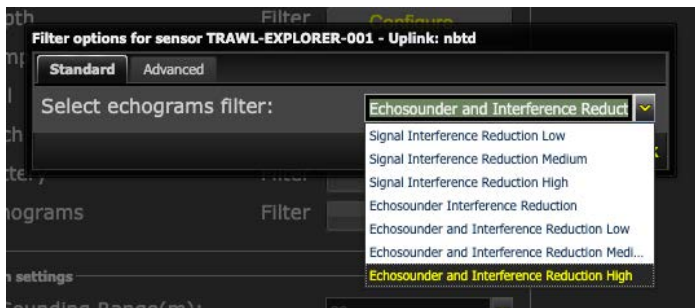

Here is an example of result when applying this filter:

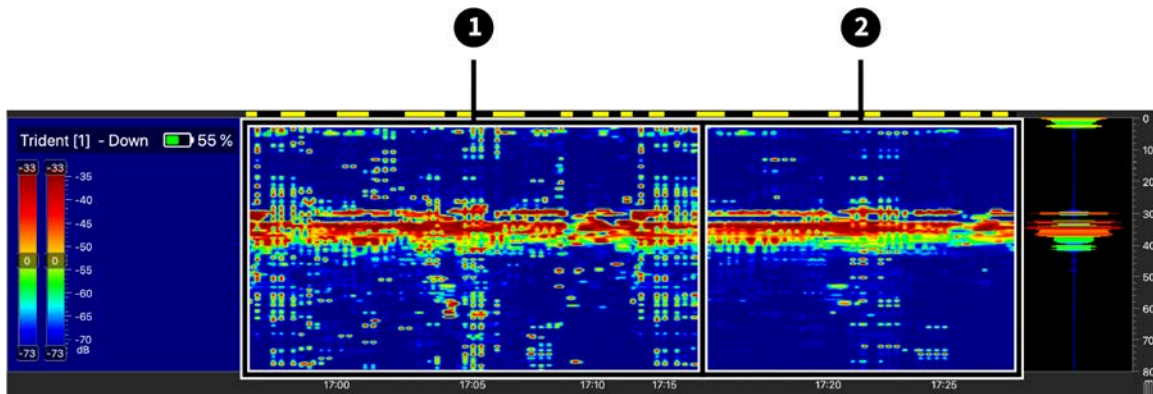

1. Noisy echogram with default filter (**Echosounder and Interference Reduction Low**)

2. With **Echosounder and Interference Reduction High** filter applied.

Support Contact

You can contact your local dealer if you need maintenance on your Marport products.

You can also ask us at the following contact details:

FRANCE

Marport France SAS

8, rue Maurice Le Léon

56100 Lorient, France

supportfrance@marport.com

NORWAY

Marport Norge A/S

Breivika Industrivei 69

6018 Ålesund, Norway

supportnorge@marport.com

SPAIN

ICELAND

Marport EHF

Tónahvarf 7

203 Kopavogur, Iceland

supporticeland@marport.com

SOUTH AFRICA

Marport South Africa

Cape Town, Western Cape

11 Paarden Eiland Road

Paarden Eiland, 7405

csanter@marport.com

UNITED KINGDOM

Marport Spain SRL

Camino Chouzo 1

36208 Vigo (Pontevedra), Spain

supportspain@marport.com

Marport UK Ltd

32 Wilson Street

Peterhead, AB42 1UD, United Kingdom

gyoungson@marport.com

USA

Marport Americas Inc.

12123 Harbour Reach Drive, Suite 100

Mukilteo, WA 98275, USA

supportusa@marport.com

Appendix

Frequency Plan

It is important to carefully plan the setup of your sensors before adding them to the system. You can create a table with a list of frequencies and complete it when you add sensors.

Boat & Channel Codes

This list shows the standard frequencies for PRP telegrams. When you configure boat codes, make sure to respect the correct interval between frequencies (see table above).

Codes		
BC/CH	Frequency	FID (Scanmar)
C-1/CH1	42833	45
C-1/CH2	41548	32
C-1/CH3	41852	35
C-1/CH4	40810	25
C-1/CH5	42500	42
C-1/CH6	43200	49
C-2/CH1	42631	43
C-2/CH2	41417	31
C-2/CH3	41690	33
C-2/CH4	40886	26
C-2/CH5	42300	40
C-2/CH6	43100	48
C-3/CH1	42429	41
C-3/CH2	41285	30
C-3/CH3	41548	32


C-3/CH4	40970	27
C-3/CH5	42100	38
C-3/CH6	43000	47
C-4/CH1	42226	39
C-4/CH2	41852	35
C-4/CH3	41417	31
C-4/CH4	41160	29
C-4/CH5	42700	44
C-4/CH6	43300	50
C-5/CH1	42024	37
C-5/CH2	41690	33
C-5/CH3	41285	30
C-5/CH4	41060	28
C-5/CH5	42900	46
C-5/CH6	43400	51
C-6/CH1	39062	3
C-6/CH2	39375	7
C-6/CH3	39688	11
C-6/CH4	40000	15
C-6/CH5	40312	19
C-6/CH6	40625	23
C-7/CH1	38906	1
C-7/CH2	39219	5
C-7/CH3	39531	9
C-7/CH4	39844	13
C-7/CH5	40156	17

C-7/CH6	40469	21
---------	-------	----

Frequencies and intervals

The diagrams below show the bandwidth of the different types of Marport sensors and intervals you must respect when adding other sensors.

Figure 1. PRP sensors (e.g. Catch sensor, Trawl Speed, Spread sensor...)

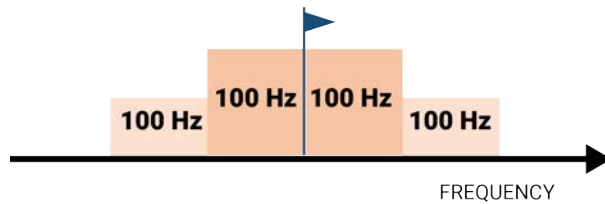


Example: If the frequency of the sensor is 40kHz, there should be no sensors between 39.9-40kHz and 40-40.1kHz.

Figure 2. Marport Pro sensors (e.g. Trident, Door Explorer)




Example: If the frequency of the sensor is 40kHz, there should be no sensors between 39.8-40kHz and 40-50.2kHz.

Figure 3. NBTE sensors (e.g. Speed Explorer, Trawl Explorer, Catch Explorer, Door Sounder)

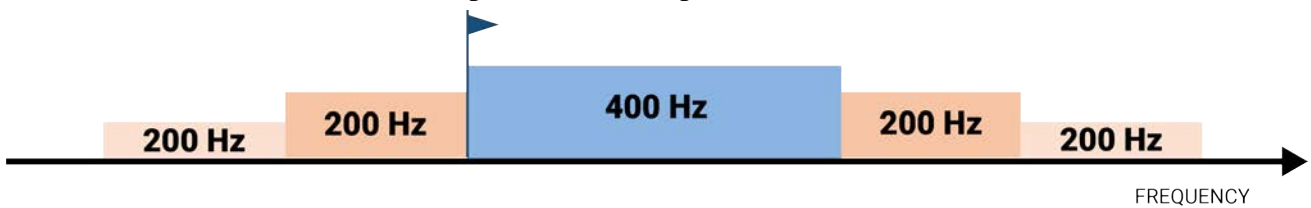


Example: If the frequency of the sensor is 40kHz, there should be no sensors between 39.8-40kHz and 40-40.6kHz.

Figure 4. HDTE narrow band mode

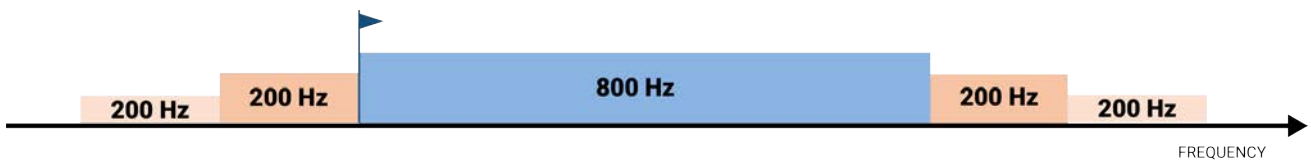


Example: If the frequency of the sensor is 40kHz, there should be no sensors between 39.8-40kHz and 40-41kHz.

Figure 5. HDTE wide band mode

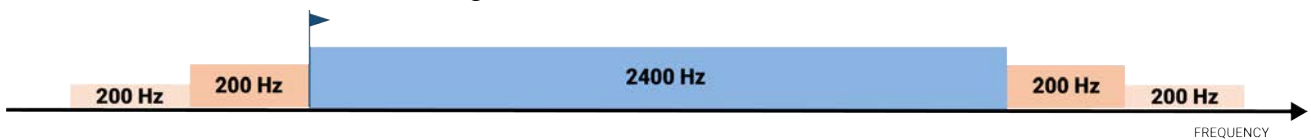


Example: If the frequency of the sensor is 40kHz, there should be no sensors between 39.8-40kHz and 40-42.6kHz.

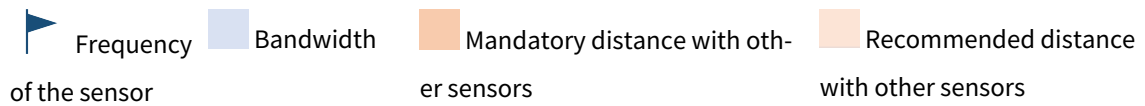


Examples of frequency allocations

- We recommend to allocate frequencies between 34 and 56 kHz for wideband hydrophones and between 41 kHz and 44 kHz for narrowband hydrophones.
- Echosounders are usually placed around 38 kHz, make sure to allow enough distance with them.


Example of a system with Spread, Catch, Trawl Speed sensors and Speed Explorer, Catch Explorer, HDTE and Door Sounder.

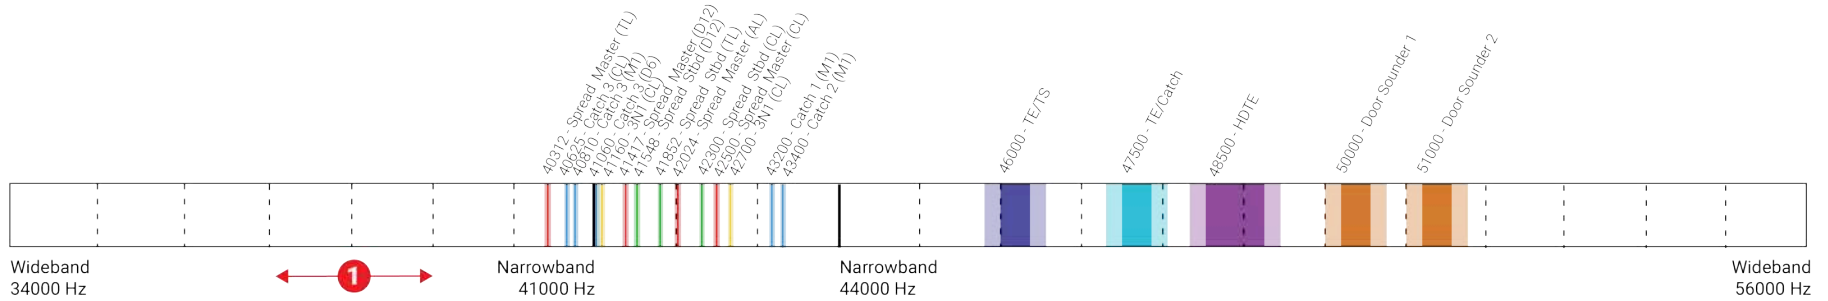


Example of a system with Spread sensors with positioning, Catch sensors, Trawl Explorer and Catch Explorer.

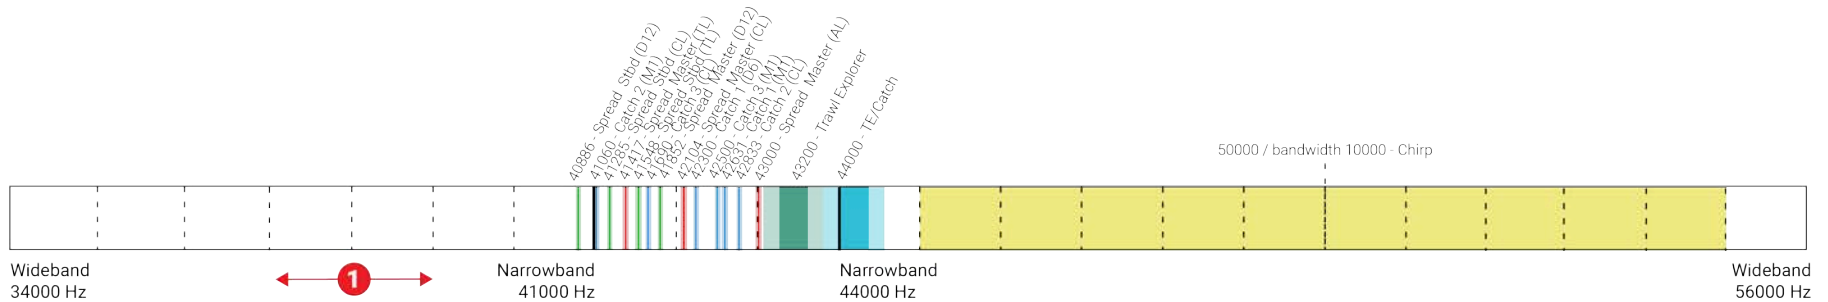

Example of a system for purse seining, with a Seine Explorer and depth Seine sensors.

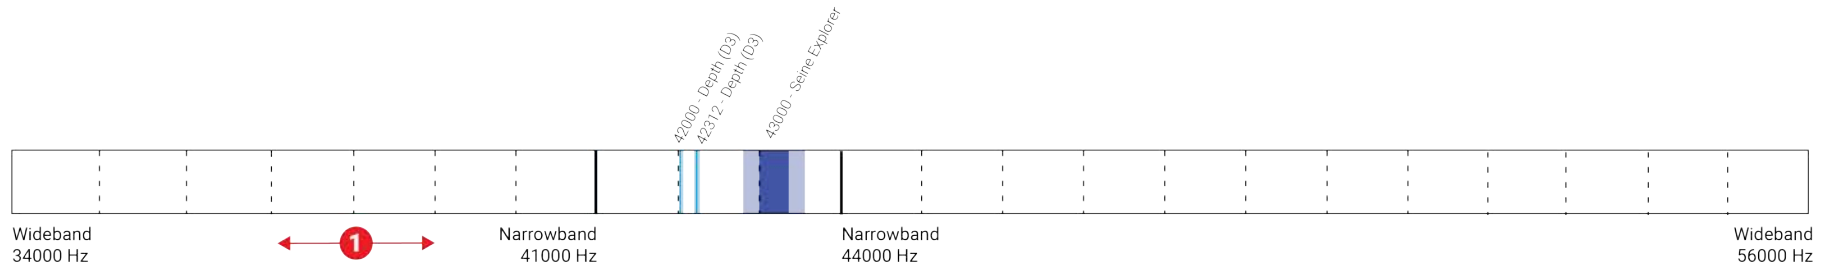

 Bandwidth

 Mandatory distance with other sensors

1 Avoid allocating frequencies between 37 and 39 kHz because this range is generally used by echosounders.

Index

A

Automatic range **24, 27**

B

Battery

Lifetime **18**

Boat code **60**

C

Channel code **60**

Charger

Connecting **52**

Cleaning **53**

Components **12**

Configuration Cable

Troubleshooting **56**

D

Dimensions **10**

Display

Echogram **42**

Dock **52**

E

Echo sounder **24**

End cap **12**

F

Frequency plan **60**

H

Housing

Description **12**

M

Maintenance

Schedule **54**

Measures **29**

Mosa2

Opening **15**

Mosa2 configuration

Change **33**

Delete **33**

Export **36**

Import **36**

Save **33**

Downloading data **31**
Recording **31**
Sounding mode **24**

O

Offsets

Depth **28**

Temperature **28**

P

PCBA **12**

Ping level **24**

Pulse frequency **24**

Pulse type **24**

R

Range **24**

Receiver

Adding to **39**

Compatibility **39**

Compatible firmware **39**

Sensor settings **40**

Replay

A2S files **46**

S

Scala2 **42**

SD card

T

Technical specifications **10**

Trawl

Node **19**

Trawl opening **24**

TVG (Time Variable Gain) **24**

U

Uplink

Frequency **21**

Power **21**